



# Network Setup Instructions

Right-click three times to access home page. Go to Settings:

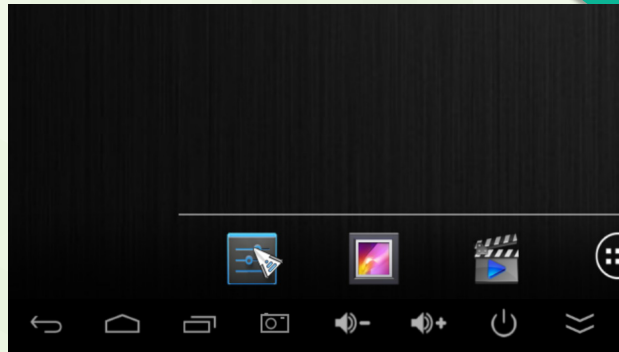


The WiFi screen should be the first screen to pop up. If the player needs to be reconfigured to a WiFi SSID, start by manually adding a network with the following steps:


- Select your Wi-Fi network from the list of available networks on the right-hand side.

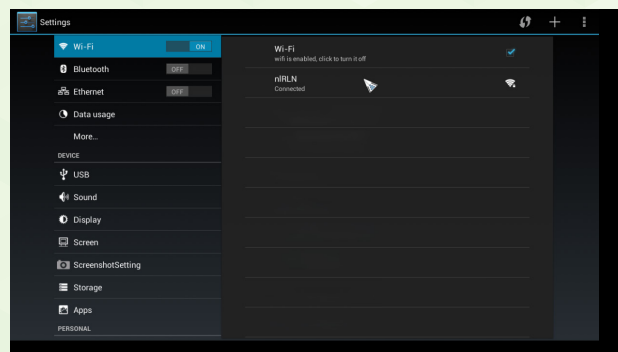

- In the “Add Network” dialogue, type in the password for your network and click “Save.”

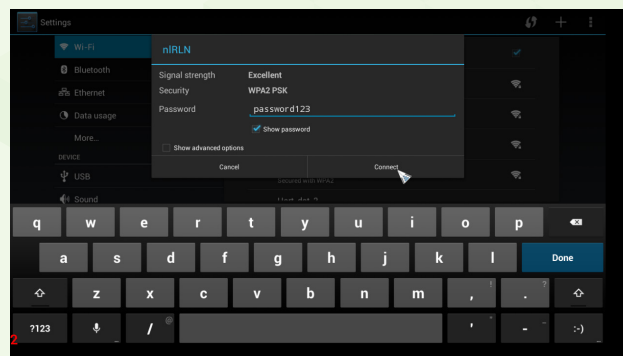

- If you would like to add a static IP Address, click “Show Advanced Options,” switch “DHCP” to “Static” and type in the new static IP, subnet mask, gateway and DNS.

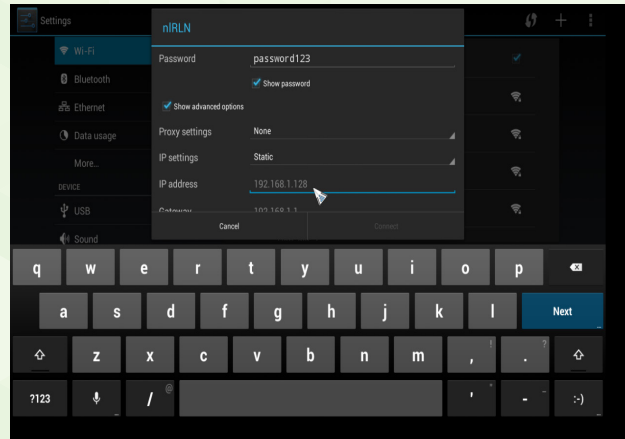

- The Minix Player may reboot during, or shortly after this process as it applies the wireless settings.
- When the network settings are properly applied, the Wi-Fi menu should say “Connected” next to your network’s name.
- Right-click to exit settings to the homepage, click the center button to view all apps, and click “A4Player” to restart your content.

